



LOXAL AJAX READY CONFIGURATION AND USER GUIDE

GETTING STARTED

ADDING A LOXAL DEVICE TO AJAX HUB



Your Loxal product will be ready for adding to your Hub. Use the **QR code** supplied with or applied to your device.

In the Ajax App, with the system disarmed, go to 'Devices' and select the '**Add device**' option.




Name the device, (we suggest when you name the device you include the product name and the serial number: example, Face Fix Key Safe LOX2758) scan the **QR code** (or insert the ID manually), select the room and go to the next step. '**Add device**'

When the app starts searching and launches countdown, press **STAR HASH 36** (*#36) on your **Loxal keypad**. For detection and pairing to occur, the device should be located within the coverage area of the wireless network of the hub (at a single protected object).

Your **Loxal device** will now show in devices.

Once you have added a Loxal product to your Ajax Hub you will need to configure the product settings in the Ajax App as follows, before it is ready to use.

1. Go to devices
2. Click on your device and choose settings
3. Configure the device as shown below

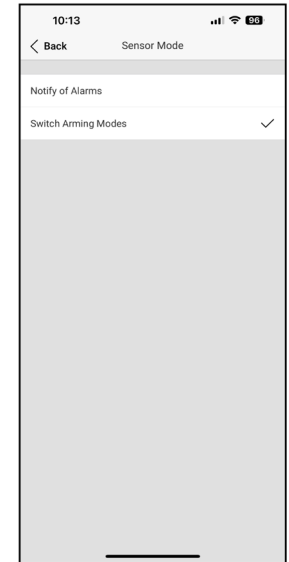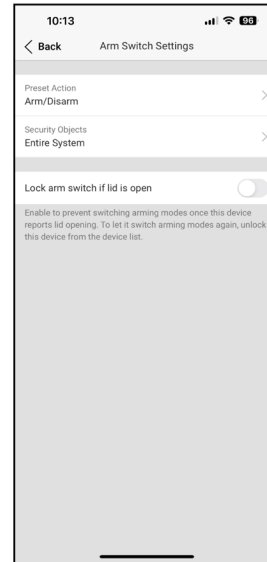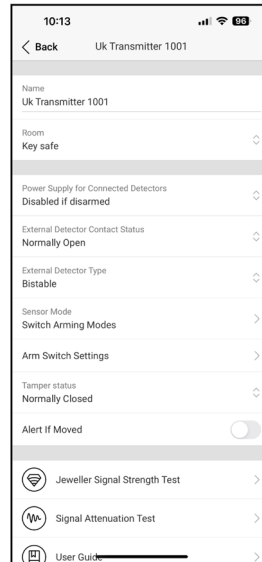

NOTES

ADDING A LOXAL DEVICE TO AJAX HUB



'Alert if moved'

You can choose the option for 'alert if move'. This is however very sensitive so only choose this option for either a 'Loxal Face Fix Key Safe' or a 'Loxal Keypad' fitted to a solid structure. We do not recommend using this feature for the 'Loxal Block lock'

Tamper Signals

The Loxal device has a tilt switch tamper.

Lid Closed — the Loxal tamper tilt switch is in the correct location

Lid Opened — the Loxal device has been moved or tampered with.

Once you have finished configuring, come out of settings and your Loxal device is ready to use.

User Guide

The Loxal keypad is universal throughout the range.

The arming and disarming of the Ajax system will always operate in the same way however the product may be different.

Alarm Keypad Only.

The Loxal Alarm Keypad's only function is to arm and disarm the Alarm.

To disarm enter your 7 digit IDACS code

To Arm enter STAR HASH ZERO ZERO followed by your 7 digit IDACS code. Example *#00 1234567

All other Loxal products.

When entering your 7 digit IDACS code to operate the device the alarm system will disarm.

The alarm system can be re-armed once the Loxal device is closed/locked.

CONTACT

TECHNICAL SUPPORT

For technical support contact your supplier or Loxal on 08009172994

AJAX < READY >

